 
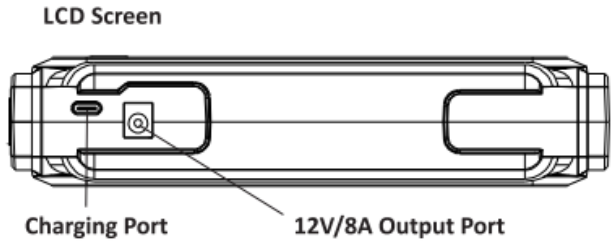 
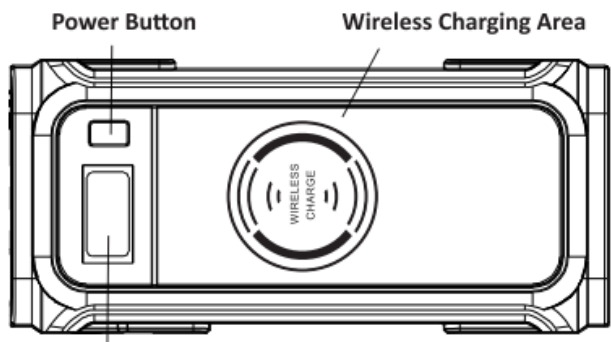 


User Manual of Multi-Function Jump Starter

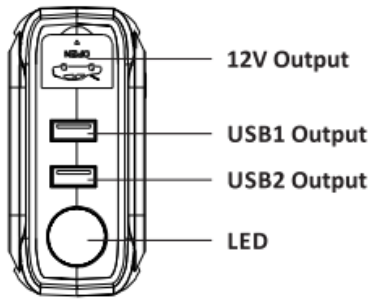

 
Please charge the jump starter every 4-6 months to extend battery life.

OPERATION INSTRUCTIONS

CHARGING YOUR Jump Starter

You can charge your Jump Starter one of Two ways:

1. Using the supplied 220Volt main charger.

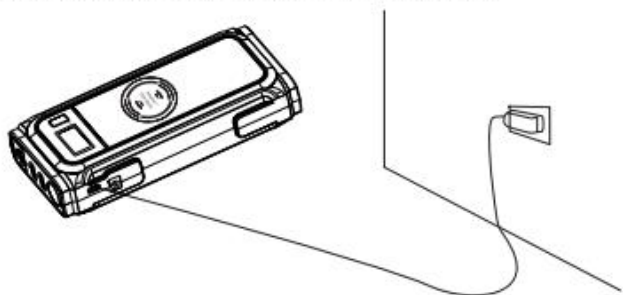

OR

1. Inserting the one end of QC 3.0 car charger into the jack of cigar lighter
2. Inserting the other end of QC 3.0 car charger into the devices.



- ※ Charging takes 3- 5 hours using either charging options.
- ※ If adaptors support charged by QC3.0, jump starter will be charged at 9V/2A, otherwise, jump starter will be charged at 5V/2A.

STARTING YOUR VEHICLE

Please ensure that your Jump Starter is no less than 50% charged. If it is below 50%, you may not be able to jumpstart your vehicle.

1. Connect the jumper lead to your Jump Starter.
2. Connect the +(red clip) to the + on your car battery.
3. Connect the -(black clip) to the - on your car battery.
4. Turn your key to start your vehicle.
5. Once your vehicle is started, disconnect the alligator clip as soon as possible.

Note:

1. After starting your vehicle, Remove the Jump Starter as soon as possible
2. DO NOT connect the 2 alligator clip together.
3. DO NOT disassemble the Jump Starter

TURNING ON YOUR JUMP STARTER

Follow 1 step as below to turn on your jump starter:

 
1. Press the power button.

Your jump starter now ready to use.

CHARGING DIGITAL DEVICES VIA USB

1. You can either use the provided USB Break out lead or your own USB cable suitable for your digital device.
2. Connect either cable to the Jump Starter.
3. If using the provided USB Break out lead, Select the correct connection for your device.


EXAMPLE BELOW:

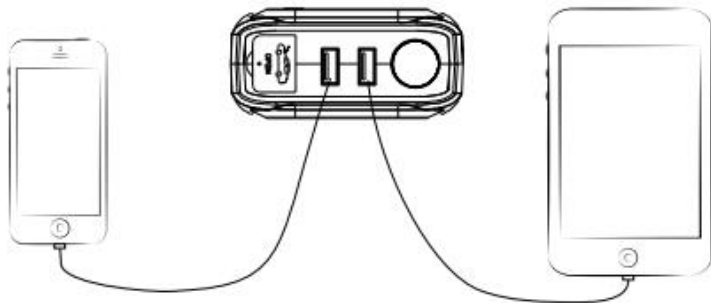

HOW TO USE THE LED TORCH

1. Double press the power button, LED light will turn on.
2. Press the button again will activate the strobe function.
3. Press the button again will activate the sos function.
4. Press the button again will turn off the light.

 Double press the power button,
LED light will turn on.

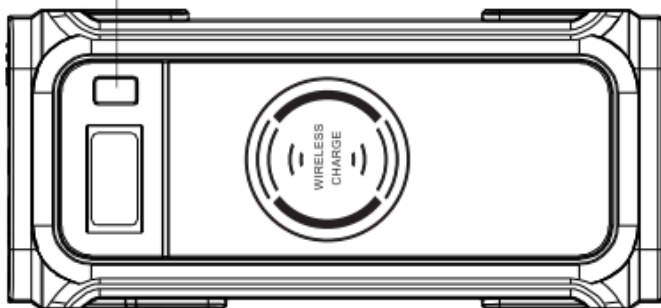

CHARGING INDICATOR

1. Press the power button to see the charge status of the Jump Starter LCD screen.
2. When charging, the LCD screen will show the specific number range from 0 to 100%.
3. The input function will stop once the jump starter is fully charged.

HOW TO WIRELESS CHARGING

Your Jump Starter is charging ready. You can charge a smart device wirelessly from your Jump Starter. Please make sure your device can be support to be charged wirelessly before using this feature. If your device doesn't support, it will not able to charge wirelessly from the jump starter.

1. Press the power button.
2. Place your device on the wireless charging area on the jump starter.
3. Your device will now charge wirelessly.

RUNNING A 12V DEVICE

Your Jump Starter is capable of running 12V device.














TROUBLE SHOOTING

If the following operations are unable to troubleshoot, please stop using the jump starter and contact with the stores which you bought the jump starter from.

Trouble	Cause	Solution
<p>The power capacity of the device is shown in 100%, but did not fully charge in charging process</p>	<p>The battery shown 100% in the LCD Screen of Jump Starter on means stop charging, and this situation means it is semi-state of charge, which is conducive to long-term storage when the device is not in use for long time.</p>	<p>Pull out the charge plug, then reinsert.</p>
<p>Nothing happens when pressing the switch button</p>	<p>Low voltage protection of the device is started and the device can not be turned on.</p>	<p>Insert the charger plug into the 9V2A input port to activate.</p>

 
WARNING!

1. After starting your vehicle, Remove the Jump Starter as soon as possible
2. DO NOT connect the 2 alligator clip together.
3. DO NOT disassemble the Jump Starter

-  Do not use the product in bathroom or other damp places or places near the water.
-  Do not remodel or dismantle the device.
-  Keep the product away from the children.
-  Do not reverse the connections of output or input.
-  Do not throw the product into fire.
-  Please don't use the charger whose charging voltage is more than the product to charge.
-  The temperature should be kept between 0°C to 40°C when the device is being charged.
-  Do not hit or throw the product.
-  If there is problem with charging, please contact your dealer.
-  Keep the product away from the flammable objects (Bed or carpet)
-  If the liquid of the device is splashed into eyes, do not wipe the eyes but wash them with clean water immediately.
-  If the product is heating and discolouring, please stop using, as it may lead to liquid, smoke and burn.
-  After long term storage or not in use, please ensure that devices will be charged and discharged in every three months.

FREQUENTLY ASKED QUESTIONS

1. How to i turn off the Jump Starter?
 - a.Press the button for 5s, the jump starter will turn off.
2. How long does a full charge take?
 - a.A full charge will take between 3-5 hours using either the 220V or 9V charging options.
3. How many times can i jump starter my vehicle?
 - a.This depend on the different displacements and vehicle engine. The Jump Starter can start a vehicle up to 30 times.
4. If not being used,how long can the Jump Starter be stored?
 - a.It is recommended to charge the Jump Starter every 3-6 months. Once the unit drops below 50% we recommend you charge it to ensure you can jump starter your vehicle.
5. The Jump Starter won't start my car, Why not?
 - a.Pls ensure the unit is charged above 50%.
 - b.Ensure the clamps are secure and not connected incorrectly.
 - c.Ensure the battery termainals are clean and free from corrosion. if corroded,clean them and reconnect the Jump Starter as per the instruction in this manual.

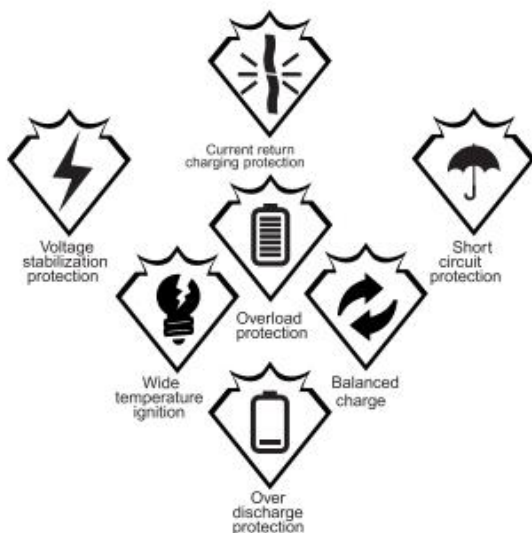

Quality commitment

12 million RMB sum insured

Our product's quality is underwritten by
PICC Property and Casualty Company Limited



ROHS

CE

FC

Warranty card

We offer 12-month warranty service for the product from the date of purchasing.

Warranty conditions:

Please show this warranty card and fill in the details to obtain warranty service. We offer 12-month warranty for the product from the date of purchase.

Warranty range:

Quality problems in the state of normal use can be guaranteed.

Damages to the product caused by the operational errors. Warranty can't be provided.

The device is dismantled, no warranty.

Product's sticker is torn off, no warranty.

We can provide maintenance service to the product that is beyond the scope of warranty, but the demander need to pay maintenance.

Model No.		Series No.	
Purchase Date		Repair Date	
Customer Name		Tel	
Customer Address			
Sales Unit			
Description of Malfunctions			