





## 7" Vehicle monitor User Manual





## U-Bracket Installation


1. Use the screw fixed the U-bracket. Put the monitor into the bracket, adjust angle and locking it.

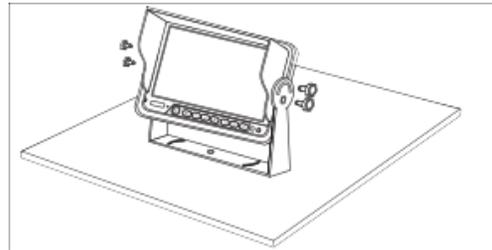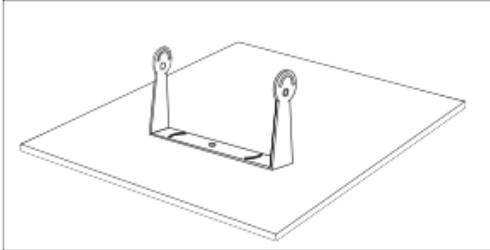


2. Finished the installation. Adjust the angle forward 30° to backward 30°. User can adjust a suitable angle by oneself.

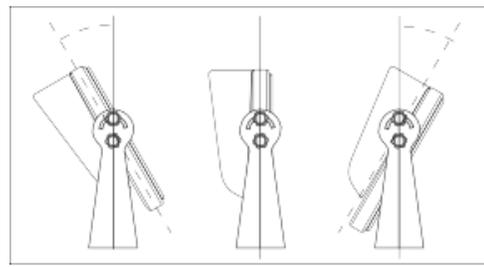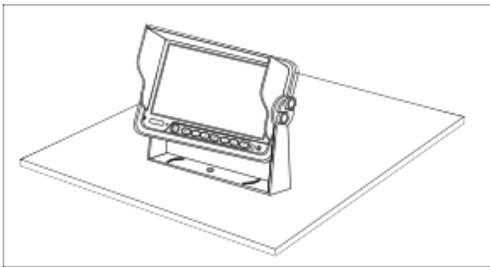

## WIRING DIAGRAM

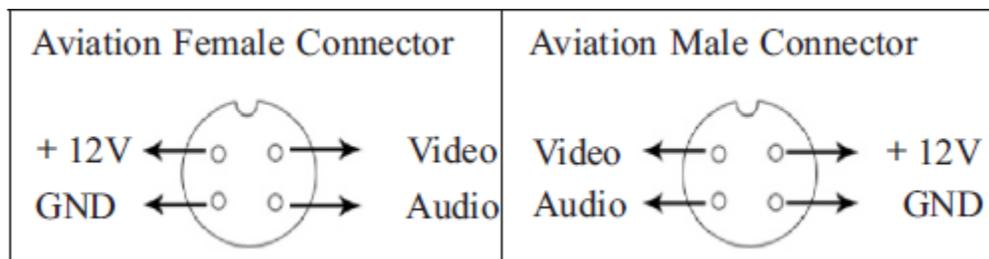


## CONNECTION

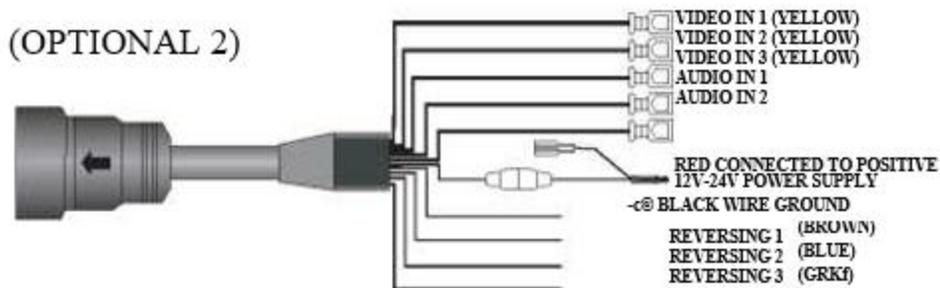

## Functions and Specifications

- 3 video input, 2 audio input , with AV/IN
- Optional PAL&NTSC system
- Resolution:800×R.G.B×480
- Power supply:12V-24V
- Remote control full function ,OSD menu
- Built-in speaker
- Contrast ,color and brightness adjustable
- Varying languages display
- With stand & U shape bracket
- Light sensor automatic adjustment

## Menu Operation Instruction

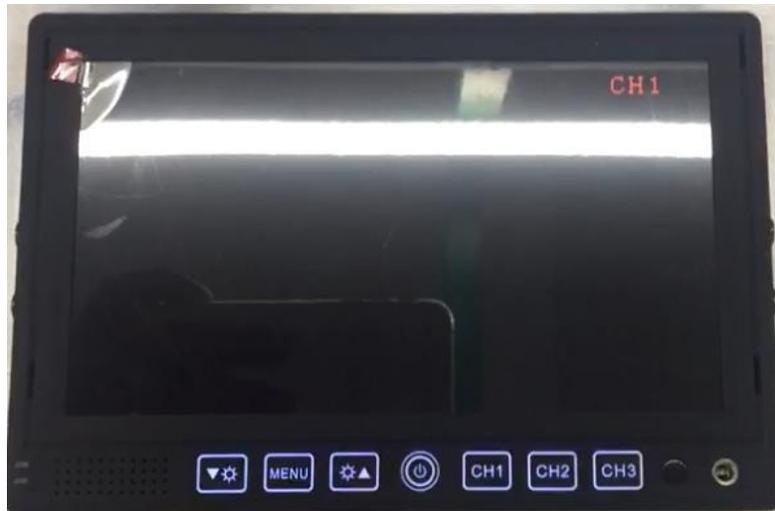

Press repeatedly to navigate to menu options



Adjust the value of chosen menu option



Powers on the device



Switch monitor display to channel 1



Switch monitor display to channel 2



Switch monitor display to channel 3



- 1.Negative Decrease
- 2.Menu
- 3.Positive Increase
- 4.Power
- 5.CH1
- 6.CH2
- 7.CH3
- 8.R/C Window
- 9.AV-IN
- 10.Bracket knobs
- 11.Dimmer sensor window

## REMOTE CONTROL

- 1. Power
- 2. CH1/CH2/CH3 Change
- 3. Positive Increase
- 4. Menu
- 5. Negative Decrease
- 6. Mode selection

