 




Car Wireless Vacuum Cleaner User Manual



Product Description:

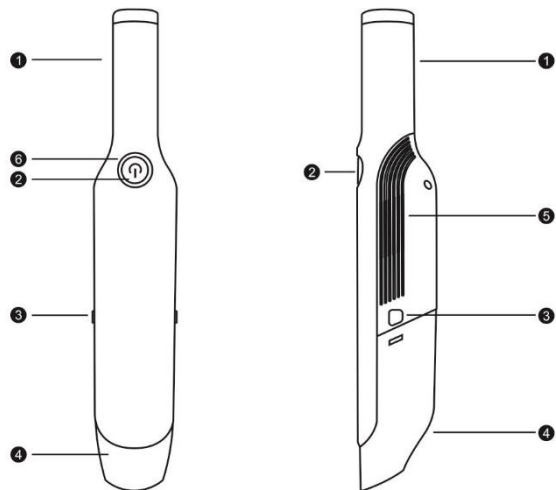

- ① Handle
- ③ Dust Bin Switch
- ⑥ Air Outlet

- ② Start Switch
- ④ Dust Bin
- ⑥ Battery Indicator Light

Accessories



Charging cord



nozzles


Product Parameters:

Suction Power	3000-5000Pa
Rated Power	60W
Battery Capacity	2000mAh 2pcs
Working Time	About 30 minutes
Dust Cup Capacity	0.2L
Working Voltage	11.1V/7.4V
Power	DC 12V


⚠ Warning:

1. It is forbidden to immerse it in water or other liquids;
2. To avoid fire, explosion, or injury, please check the vacuum cleaner and power cord before use. Prohibit to use a damaged vacuum cleaner or power cord;
3. Do not touch the power cord or vacuum cleaner with wet hands;
4. It is forbidden to leave the activated vacuum cleaner unattended;
5. Keep the vacuum cleaner or power cord away from the heated surface;
6. Do not yank the power cord or pull it out of the socket;
7. It is forbidden to cover the air inlet or outlet when using;
8. It is forbidden to inhale combustion materials, such as cigarette ends in combustion;
9. Children are forbidden to operate the vacuum cleaner or play it as toy. Please take care when the Children are near the running electric appliances;
10. Do not use adapters above 2A for charging;
11. When the dust in the dust collection bin exceeds 50%, please clean it up in time. Otherwise, it will affect the normal use of the machine.

 
Usage Method :

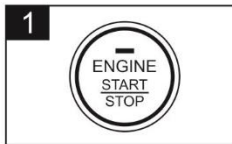


Start the car

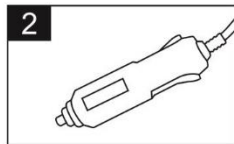 

 Put the power cord into cigarette lighter socket

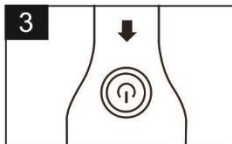

 Press the Start Switch.
(Rechargeable version: Long press the power switch to wake up the vacuum cleaner)

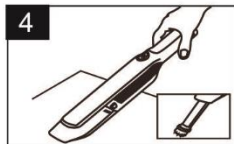

Align the suction port of the running machine to the surface of the object to be cleaned, and change different accessories according to different occasions.

*For rechargeable vacuum cleaner, please ignore the step 1 and step 2. Start from step 3 after fully charged.

Cleaning and Maintenance:

Please clean up in time, otherwise it will affect the normal use of the machine.



Press the dust bin switch and take off the dust bin.



According to the direction of picture shown, hold the dust bin and take out the filter.



 
Pour out the trash from the dust bin.



Wash the filter and dust bin, use it after drying.
Please make sure that the filter is completely air-dried.

Two Gear Technology:

Two gear suction technology is adopted in vacuum cleaner. Press the power switch one time for regular suction... It fits to clean debris, dust, etc. on flat surface. Press the power switch twice for enhanced suction. It is more suitable for cleaning the hair on carpets, dust or dust in hard-to-reach corners.

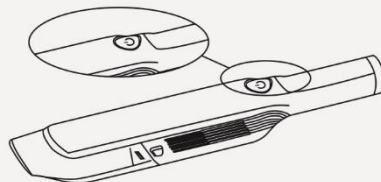

Battery Charging: Battery display status indication

In use



Blue indicator is always on

Low power



Red indicator flashing

Charging



Red indicator flashing

Charging Completed



Blue indicator on

Frequently Asked Questions

Vacuum cleaner does not work

- Battery need to be charged
- Hepa Filter is blocked and needs cleaning

Vacuum cleaner cannot pick up debris or weak suction

- Too much dust in the dust collection bin, clean up in time

Warranty Card:

User Name	Contact Number
User Address	
Email	
Purchase Address	Distributor

This Warranty card should be kept by the user properly for the warranty certificate. It will not be reissued if it is lost.

The warranty period is within 12 months from the date of purchase of the product. Product quality issues, user can use this card with the purchase invoice or copy of the invoice to contact our company

The warranty shall not apply:

- to any product subjected to misuse, alteration, act of God, improper handling, improper transport, improper testing or unauthorized repair;
- to cosmetic problems or defects which result from normal wear and tear under ordinary use yet not affecting the performance or use of the product;
- if the product is disassembled or altered;
- to any packing, transportation, export / import tax or any related expenses