



## **11" ROOF MOUNT DVD**

## **OPERATING INSTRUCTIONS**

## Simple Trouble-shooting

Problems	Possible Reasons
No sound and picture	<ul style="list-style-type: none"> <li>AC adaptor or car adaptor is not properly connected.</li> <li>Unauthorized power supply is used.</li> <li>The power switch is in OFF mode.</li> </ul>
No Picture	<ul style="list-style-type: none"> <li>The channel selection is not done properly.</li> <li>Resetting the broadcast channels.</li> </ul>
No Sound	<ul style="list-style-type: none"> <li>The volume is turned OFF.</li> <li>The Audio sets are set in a wrong way.</li> <li>The broadcast signal is too weak.</li> </ul>
Poor Reception	<ul style="list-style-type: none"> <li>The Antenna is not adjusted properly.</li> <li>The channels are not tuned properly.</li> </ul>
Dark Picture	<ul style="list-style-type: none"> <li>The brightness and contrast is not adjusted properly.</li> <li>Cold environment temperature.</li> </ul>
Punch-drunk or unstable picture	<ul style="list-style-type: none"> <li>The antenna is not adjusted properly.</li> <li>Weak TV Signal</li> </ul>
Jitters	<ul style="list-style-type: none"> <li>The Antenna direction is incorrect</li> <li>The TV maybe receiving reflecting signals from buildings or mountains in the area.</li> </ul>
Snowflake	<ul style="list-style-type: none"> <li>The TV maybe receiving electronics or electromagnetic interference when car engineers trains high voltage wires or neon signs</li> </ul>
Poor Colour	<ul style="list-style-type: none"> <li>The colour is not properly adjusted.</li> <li>Weak Signal</li> </ul>
No Power Supply of No Voice	<ul style="list-style-type: none"> <li>Electric wire Conjunction inaccuracy.</li> <li>Check line connections</li> <li>The fuse breaks: Replace with compatible fuse specification.</li> </ul>
The CD has already inserted but no sound	<ul style="list-style-type: none"> <li>Press the CD to its right direction and make its label in an upward exposure.</li> <li>The Disc become soiled or row to harm seriously;</li> <li>Clean the CD or replace with a new Disc</li> </ul>
The vibration caused emergency jump to the sound phenomenon	<ul style="list-style-type: none"> <li>Unsteady installation; (Use gearing parts to install this machine firmly.</li> <li>Clean the CD or replace with a new Disc.</li> </ul>
Have no vibration appearing with the sound phenomenon.	<ul style="list-style-type: none"> <li>The CD is dirty or damaged, Please clean or replace the CD.</li> </ul>

## OPERATION MANUAL

### Cautions:

1. Keep the machine from rain or damp to avoid fire and electric shock.
2. Do not try to repair the device by yourself. Please switch off the machine immediately and inform our factory or dealers if there's any problem. This product is comprised of many electronic components. Disassembling or self-renovating without a professional guidance can cause machine damage.
3. Do not expose machine to moisture, dust, vapour, oil smog, direct sunlight or influential environment.
4. Do not use thinner or other chemical detergents in cleaning the machine. Use a soft cloth to remove dust or dirt on the machine.
5. Keep the machine away from very cold or very hot temperature environments. Note: the machine's storage temperature ranges - 10 degrees Celsius ~ 60 degrees Celsius and its operating temperature is 0 degrees Celsius ~ 40 degrees Celsius.
6. Only play compatible Discs. This machine can only play DVD/CD-R/CD-RW/SVCD/VCD/DVCD/CD/MP3/MP4/JPEGS, receive TV signal with built it tuner.
7. Avoid dropping or large impact to the machine.
8. For your safety, do not turn on/ watch or operate the machine while driving. In some countries and regions it's against the law.
9. Safe power supply : DC 12V(10V-14V)

### Attention:


There maybe a few bright or dark spots on the screen when it plays which is a very common phenomenon in active matrix display technology. It does not indicate any fault or problem.


 

## Table of contents

Functions and Features -----	1
Appearance and Functions -----	2
Wiring Diagram -----	3
Installation -----	4
Remote Control Panel -----	5
The Remote control battery Installation sketch map -----	5
Method of operating DVD System -----	6
How to Setup DVD Menu -----	7
How to setup TFT Menu -----	13
USB/SD Function Description -----	15
Simple Trouble Shooting -----	16



### USB/SD Function Description

1. Entrance: When entering to DVD state, press USB/SD button on the remote control board unit to process  
 (Please press the “Stop” button to enter the above transformation if the DVD is in read state)
2. Withdraw: When in USB/SD working pattern, press “Stop” button and press USB/SD button again then transfer to DVD working pattern again.

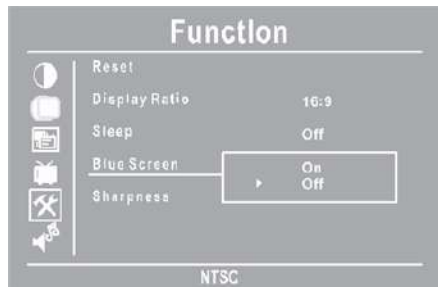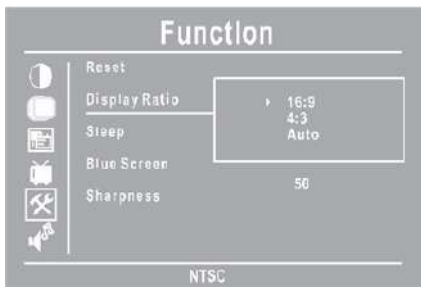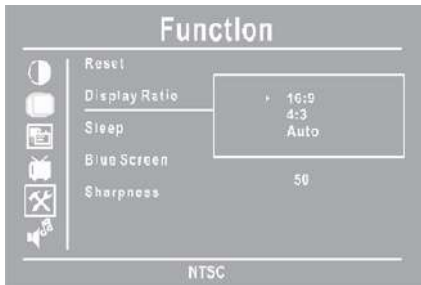

## Functions and Features

- DVD/TV
- Super slim design, perfect combination of crystal glass panel and roof mount style
- Digital technology, clear picture with no interference
- Auto channel search, auto store and full channel receive
- Frequency range : FM87.7 – 89.2MHz
- IR transmitter earphone output
- Audio/Video Input and Output
- Full-function remote control
- With USB / SD
- Built-in Speaker
- Screen Size : 11 Inches (16.9)
- With game
- Pixel : 800(W) x RGB x 480(H)
- Power: about 20W

## Appearance and Functions



 
1. Light
2. Previous Track
3. Next Track
4. TV/DVD Switch
5. Power ON/OFF
6. Screen Open Button
7. Menu/Analogue Increase or Decrease
8. Eject Disc
9. Stop
10. Play/Pause
11. USB/SD Switch
12. Play Disc
13. Remote Sensor



## How to setup TFT menu


Press the “M” button, the first main menu “Colour” will show. Then press the “+” or “-” button, to show the “OSD”; “TV” (under the state of “TV”); “Function”; “Sound” in order

Turn the “M” button right once for it to enter the project which needs to be adjusted. Press the “+” or “-” buttons to choose and adjust the projector by turning it left or right.

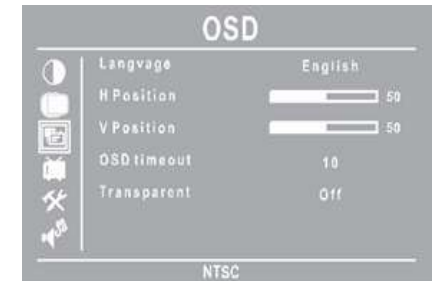




## DIGITAL SETUP

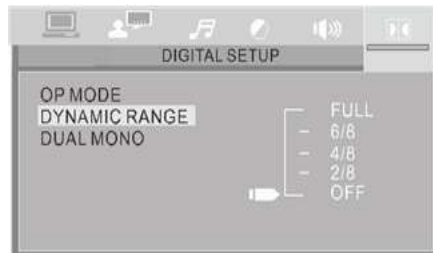


## Wiring Diagram

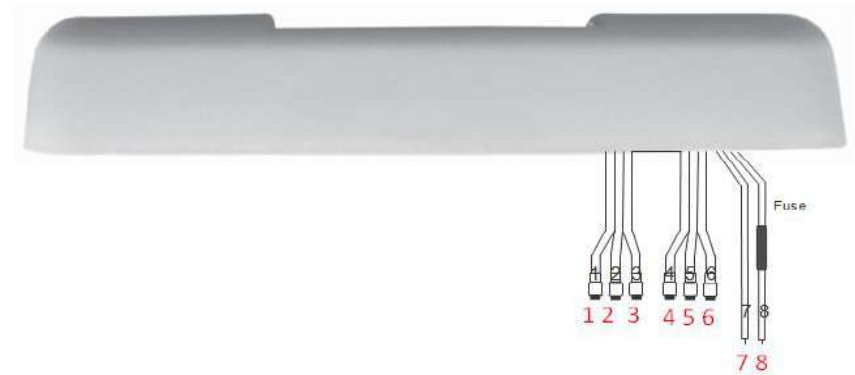

1. Red Audio out (R)
2. White Audio In (L)
3. Yellow Video In
4. Red Audio out (R)
5. White Audio Out (L)
6. Yellow Video out
7. Power Harness Input


Without Audio Video Input or Audio and Video Output, The wire of input and output does not need to be connected.

# Installation

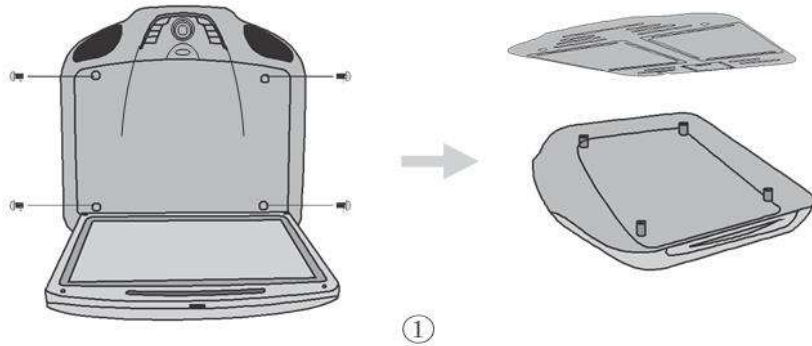


1. Disassemble the metal support bracket from the unit as shown in the first illustration by loosen the four screws on the bottom of the unit body.

2. Tighten the metal support bracket To the ceiling of vehicle as shown in the second illustration. Leave a certain space to let the connecting wire pass through. (Take extra care to avoid damaging the ceiling of the vehicle).

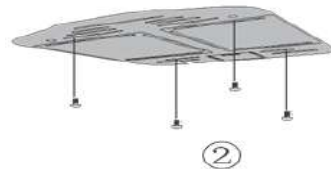


3. To install the unit to the metal support bracket, connect the unit and the wires passing through the remaining space. (Take care on fixing the wires to avoid pressing the DVD Chip and install special screws to avoid loose screws).

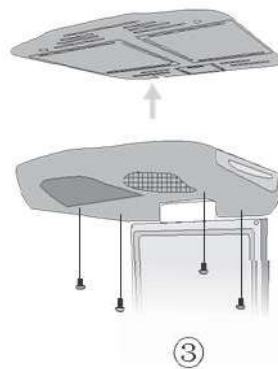


# SPEAKER SETUP




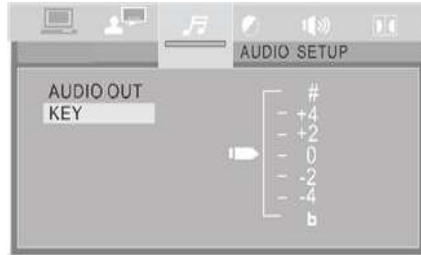

## VIDEO SETUP

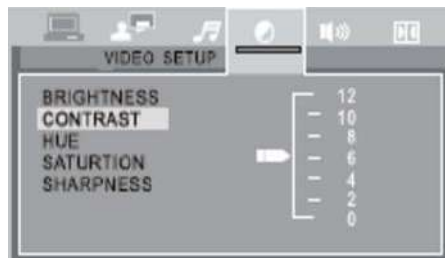


## Remote Control Panel

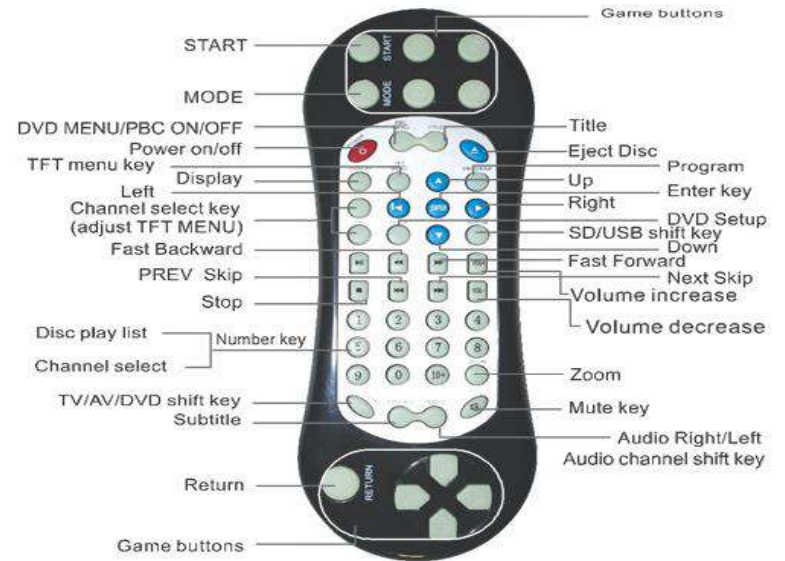

### The Remote Control battery Installation sketch map

#### Attention:

1. Direct the remote control to the infrared receiver of the machine.
2. Do not press, drop or disassemble the Remote control.
3. Continually press the keys on control with at least two-seconds pause.
4. Commonly, the life of batteries is about one year, always use new batteries when replacing the old set.
5. Please put out the battery when not using the remote control for a long time.
- 6.

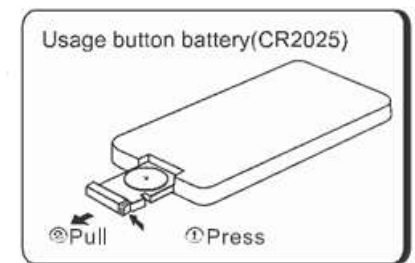



## Method of Operating DVD system

### Playing a Disc (DVD/VCD/CD)

- Turn on the player and insert the DVD disc.
- Make sure that the disc's label is facing up.
- After the DVD slides into the slot, it will be automatically played.
- To stop, press the "stop" button
- For temporary stops, press the "Play/Pause" button.

### Playing a MP3 File

- Turn on the player then insert disc.
- Make sure that the disc's label is facing up.
- After the disc slides in to the slot, the disc automatically plays.
- To stop, press the "Stop" button.
- For temporary stop, press the "Play/Pause" button
- To resume again, press the "Play/Pause" button again.
- To replay a song you want,
  1. Press the button after choosing a song/track you want by using the arrow button.
  2. You can replay songs directly by entering a specific number of the song.


 


### Disc Menu

- You can select the recorded menu on discs.
- To display recorded menu on disc DVD/VCD 2.0, Press the (DVD MENU) button.
- The recorded menu on discs will appear. (Scene Selection, Special Features, etc.)
- Menu appears differently depending on the discs.
- CD, VCD 1.1 does not have a disc menu function.
- Press the arrow buttons to navigate the disc menu and press the "ENTER" button after deciding.



## AUDIO SETUP



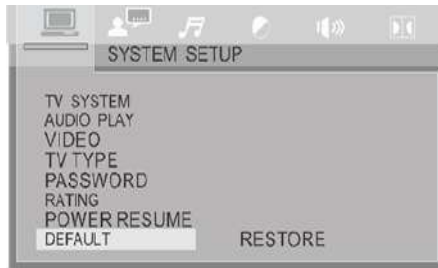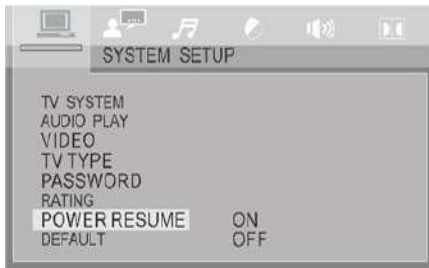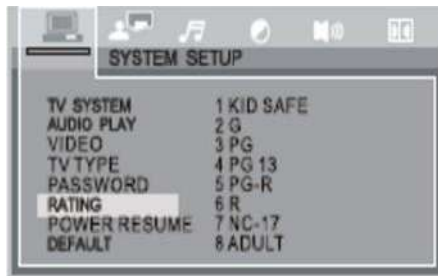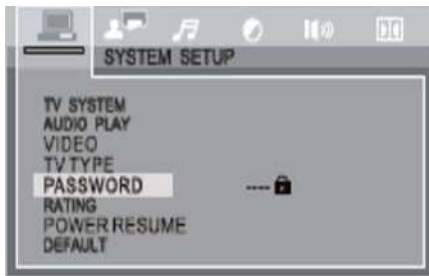




## LANGUAGE SETUP



## How to setup DVD menu

You can easily modify setup information on the setup menu. Press "SETUP" then show main menu. Use left and right arrow buttons to navigate the menu then press the down arrow to choose settings items. Press right arrow and enter subtitle. Press up and down arrow to choose items. Press the "ENTER" button after deciding. Press "SETUP" exit menu.
 
## SYSTEM SETUP

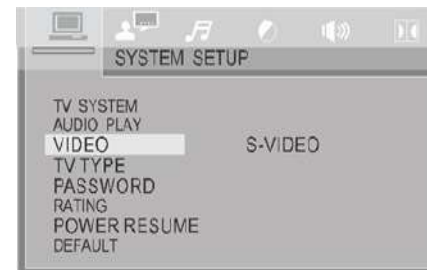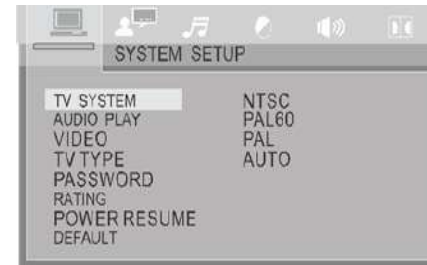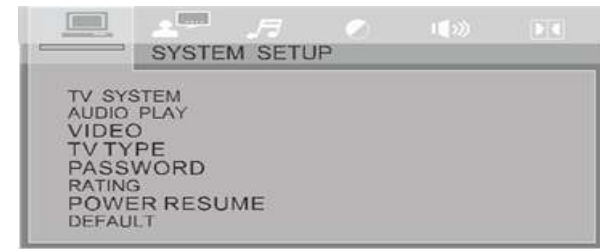

## Frequently Asked Questions

**1. How do I pair the wireless headphones to the unit?**

- Please make sure you have batteries installed on the headphones.
- Turn ON the IR function of the roof mount DVD player - Press M on the roof mount DVD player>press on the seek button until sound> you can then select to turn on/off IR or FM from there.

**2. What colour wire is the door light wire?**

- The door light is the yellow wire

**3. How do I turn OFF the dome lights manually?**

- Just press down the actual dome lights to manually turn them OFF.

**4. Remote control is not responding to any command.**

- Please be sure batteries are installed properly
- Point the remote directly to the IR receiver of the roof mount DVD player. It must have a clear line of sight.