

---

# M725AHD

## User Manual



Before operating the Monitor, please read this manual thoroughly and retain it for future reference.


---

## Key Description



- 1: After pressing "MENU" to enter the menu screen, press this key to increase the setting value;
- 2: "MENU" : Short press to open the menu screen, return to the previous menu function setting / Toggle menu function/exit menu function setting;
- 3: After pressing "MENU" to enter the menu screen, press this key to decrease the setting value;
- 4 : Power button,;
- 5: CAM- CH1/CH2/CH3 Switch
- 6: Un-mirrored/Mirror Image Switch
- 7: Mode-user personality image mode button, like USER/DAY/NIGHT1/NIGHT2/NIGHT3.
8. IR Remote Window

## Remote control instructions

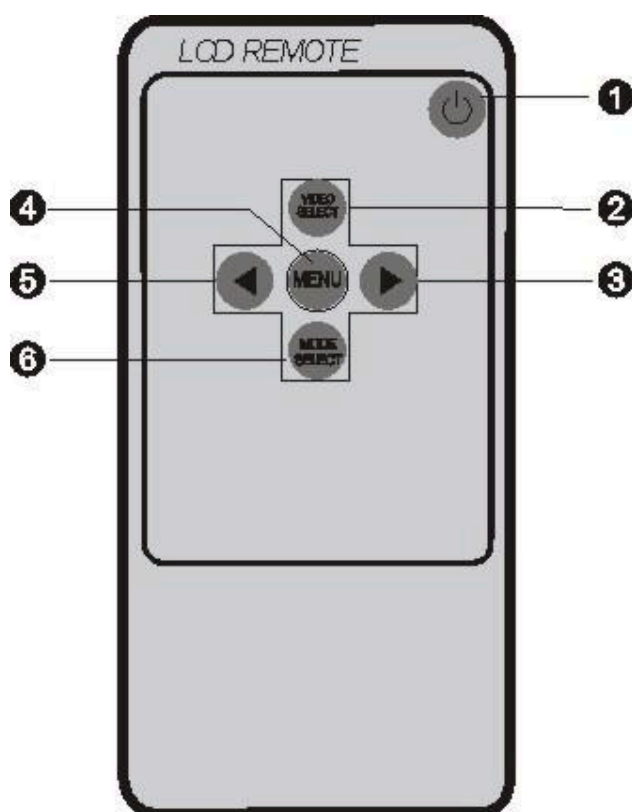

1. POWER : Turn on / off the screen picture output display;
2. VIDEO SELECT : Select between CH1/CH2/CH3 ;
3. Increase setting value;
4. Enter the menu screen and return to the previous menu function setting / exit menu function setting/exit menu function setting;
5. Decrease the setting value;
- 6: Color mode adjustment, you can choose USER/DAY/NIGHT1/NIGHT2/NIGHT3.

## Specifications


Item		parameter
LCD Dimension		7"
System language		Chinese, English, Other (can be customized)
Video	Video input	3 CH Video Inputs. 720P@25/30,1080P @25/30 or CVBS PAL& NTSC Auto Recognize
	Resolution	1024*600 (IPS Panel)

---

Power and power consumption	Power management	Adaptive wide-format power input with protection functions such as low voltage, over voltage, and reverse short circuit;
	Input voltage	DC: +12V ~ +36V
	Output voltage	+12V
	Power consumption	Normal working status <5W (without display and camera)
Working environment	Temperature	-30°C ~ +70°C
	Humidity	20% ~ 80%


## Functions Description

1. Press the MENU button to enter the **IMAGE SETTING**.

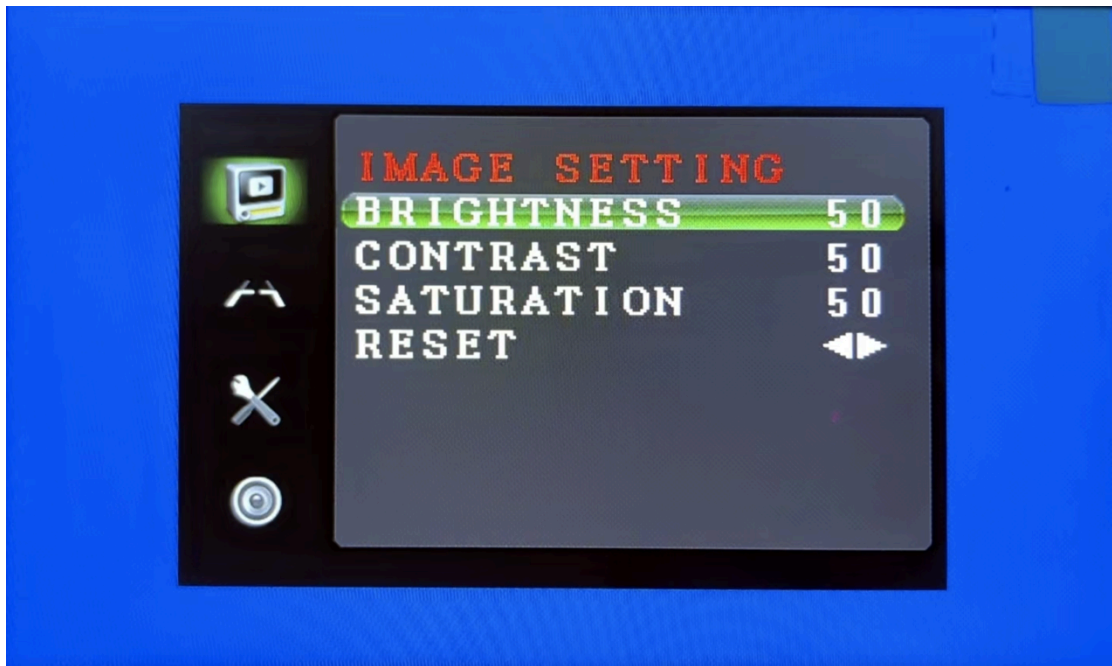

Using button 5 or button 7 to choose "BRIGHTNESS" or "CONTRAST" or "SATURATION" or "RESET" settings, use button 1 or button 3 to set the value. Use button 1 or button 3 to restore default settings;


2. Press the MENU button to enter the **GENERAL SETTING**.

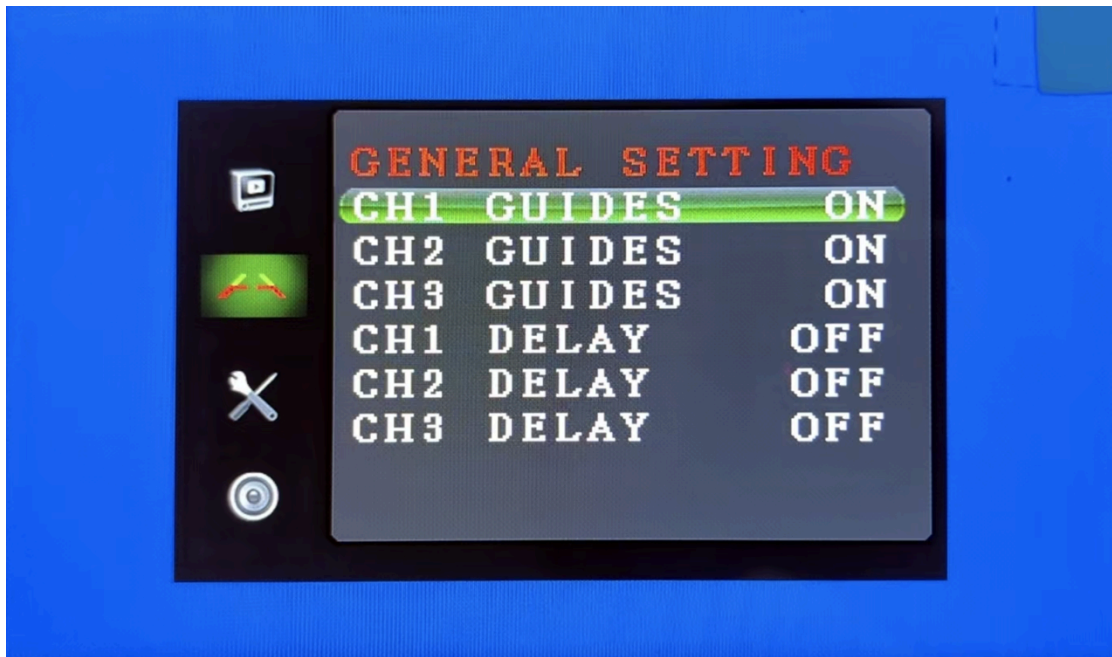

Using button 5 or button 7 to choose CH1/CH2/CH3's "GUIDES" settings, use button 1 or 3 to turn on and off it. After trigger wire is activated, the parking lines will be turned on or off.

Using button 5 or button 7 to choose CH1/CH2/CH3's "DELAY" settings, use button 1 or 3 to turn on (1-15 seconds settable) or off it. After correspond trigger wire is activated, the triggered displayed image will keep showing for the set period (1-15 seconds) before switching to the default image.

3. Press the MENU button to enter the **SYS SETTING**.

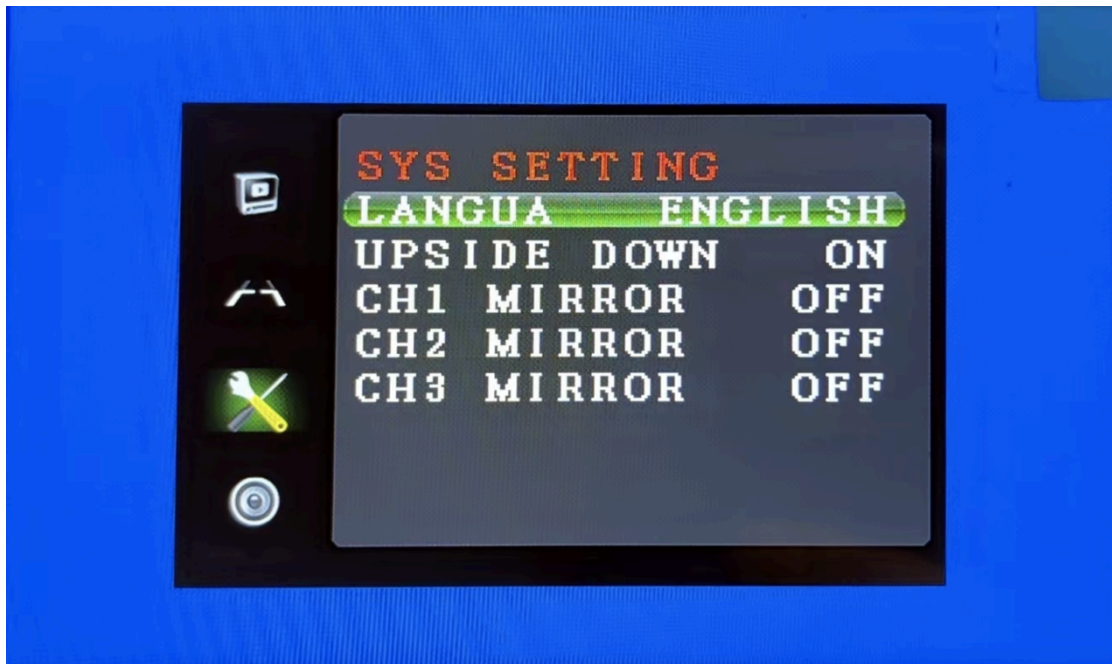

Using button 5 or button 7 to choose the languages settings— English, Russian,Japanese,Korean.

Using button 5 or button 7 to choose the UPSIDE DOWN setting, use button 1 or button 3 to turn on or off it. If turn it on, you can install the monitor's U bracket to the ceiling of your vehicle.

Using button 5 or button 7 to choose MIRROR setting, use button 1 or button 3 to turn on or off the mirrored or un-mirrored function.

## Wiring Diagram



