




We recommend doing a benchmark test before installation to ensure that all components are working properly.

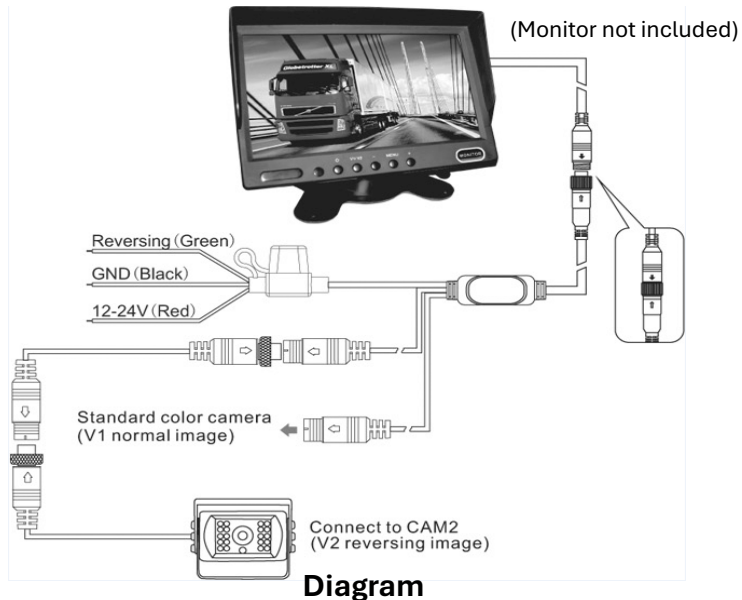

Attaching a 4-pin camera to a 4-pin monitor

1. Ensure that there's no power going to the cable/monitor.
2. Line up the arrow markings on both the camera connector and the extension lead connector.
3. Then insert the camera's female connector into the male connector.
4. Screw the spin locking collar to secure.



Camera Installation

1. Attach the supplied mounting bracket to the vehicle. Adjust the angle of the camera and fasten the screws firmly.
2. Run the cable from the monitor to the camera.

This reversing camera is a reversing guide only and does not replace careful driving.

Maintenance

Although this Rearview Camera requires little care, you can still maintain its condition and performance by following these steps:

- Occasionally clean the camera lens with a damp soft cloth.

Note: The user should not attempt to service the unit beyond that described in the operating instructions. All other servicing should be referred to qualified personnel.

Troubleshooting

Error/malfunction: The monitor image is not displayed clearly.

Possible cause/s: The camera lens may be dirty. Bright light is hitting the camera lens.

Solution: Carefully clean the camera lens. The image quality will improve once you move out of the area of the interfering light.

Error/malfunction: No Picture

Possible cause/s: There is no connection between the camera and the monitor. The camera cables may not be connected correctly or may have loosened.

Solution: Check if the camera connection cable is connected correctly and securely.

