

RP 03 Repeater Installation Manual

Install repeater in the center of rear axle chassis, antenna should be exposed and suspended, and cannot be blocked by any subject.


Repeater working status: Connect repeater to power, LED is ON as Standby mode, upon receiving data from sensors LED flashes twice.

Operation temperature	-20°C~80°C	Frequency	433.92MHz
Storage temperature	-30°C~85°C	Transmission power	<18dBm
Input voltage	DC 12~24 V	Size (L*W*H)	77*63*16mm

正面

尺寸：142*100MM

GB26149-2017

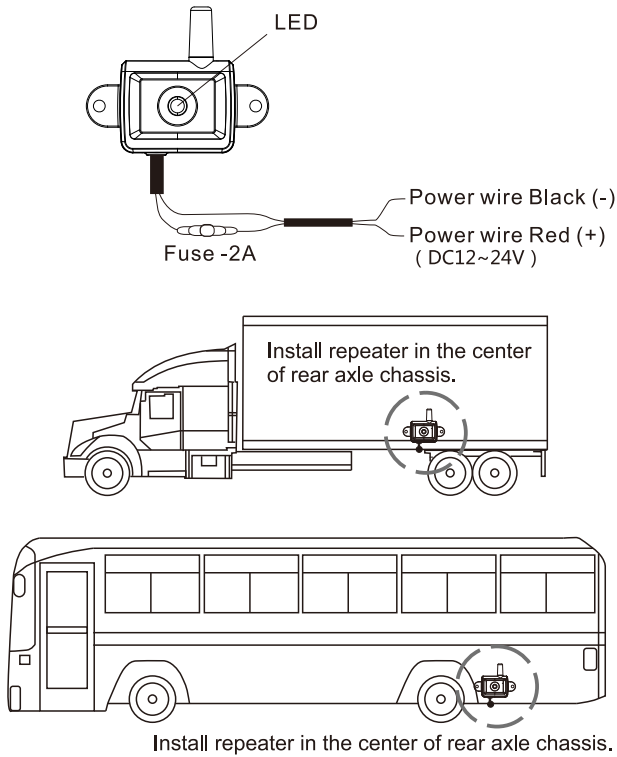

反面

尺寸：142*100MM

RP03 中继器英文安装指南

AUTOTECH		物料类型	中继器安装指南	尺 寸	142*100MM
输出日期	2021-3-15				
制 作	石月兵	材 质	128G铜版纸单色印刷		
备 注	正反面				