

User Manual

Bluetooth OBDII Car Diagnostic Scanner

Product Parameters

1. Communication method: Bluetooth 4.0
2. Software platform: Support Android / Windows
3. Operating voltage: 9V~16V
4. Operating temperature: -40°C~85°C
5. Operating humidity: <60%
6. Supported vehicle: OBDII protocol vehicle

Multi-Protocol Support

1. SAE J1850 PWM (41.6Kbaud)
2. SAE J1850 VPW (10.4Kbaud)
3. ISO9141-2(5 baud init, 10.4Kbaud)
4. ISO14230-4 KWP (5 baud init, 10.4 Kbaud)
5. ISO14230-4 KWP (fast init, 10.4 Kbaud)
6. ISO15765-4 CAN (11bit ID, 500 Kbaud)
7. ISO15765-4 CAN (29bit ID, 500 Kbaud)
8. ISO15765-4 CAN (11bit ID, 250 Kbaud)
9. ISO15765-4 CAN (29bit ID, 250 Kbaud)

Compatible Software

Android:

- Torque
- DashCommand
- E OBDII
- OBD Car Doctor
- Auto Doctor

iOS:


- OBD Fusion
- DashCommand
- OBD Car Doctor
- Auto Doctor

Windows:



- ScanMaster-ELM

Operation Instructions


1. Download and install the Torque app or any other app you wish to use to your Android device from Google Play.
2. Plug the adapter into the OBDII port of your vehicle.

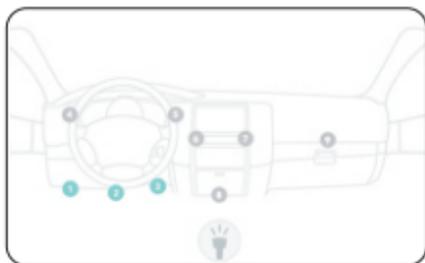


3. Open your device's Bluetooth menu and search 'OBDII' Bluetooth, Enter the password "1234 or 0000".

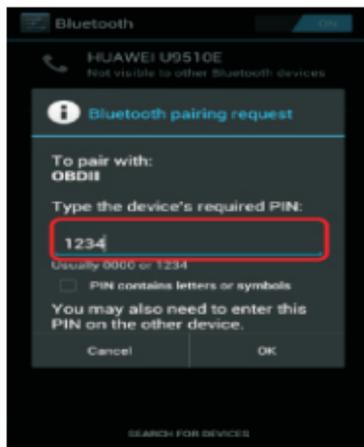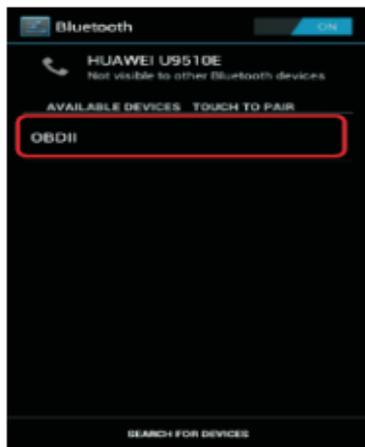

4. Navigate to the Settings from the Main Menu, then select "OBD2 Adapter Settings".

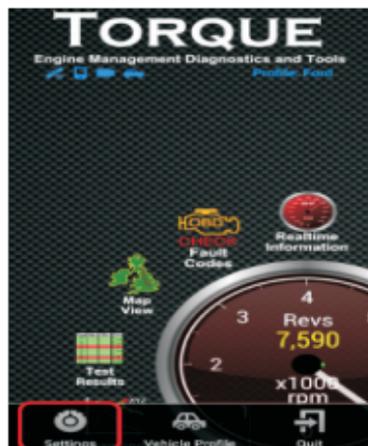

5. Select "Connection Type" and set it to "Bluetooth", Choose Bluetooth Device is OBDII.

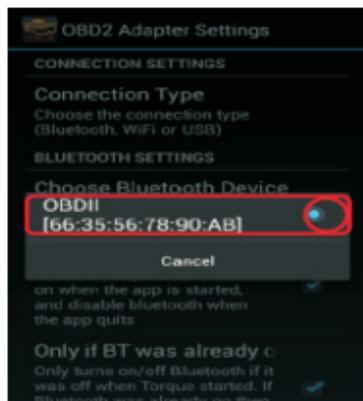

6. Wait for the connection to be completed.



Once connection is complete, adjust any settings to preference before diagnosis. When finished, use the back button on your phone to return to the main menu of Torque.

Troubleshooting

My device pairs with the adapter, but the Torque app won't connect to the scanner.

The most common reason for this issue is that the internal setup steps for Torque have not been completed. Make sure that you have completed these steps in the following order: Open Torque > Enter the Torque settings menu > Select OBDII adapter settings > Select connection type > Choose Bluetooth > Choose Bluetooth Device is OBDII > Return to the main menu.

If this has been completed and does not resolve the problem, try disconnect any Bluetooth and restarting your device. This fixes most minor connection issues.

My phone and Torque connect with the adapter, but Torque is prompting a message stating “Cannot connect to ECU”.

First try resolving the issue by restarting your device. This problem could also indicate that your vehicle is not OBDII compliant. Check to see if your vehicle meets the protocol requirements of the scanner.

If your car meets protocol, try re-installing the software app. While this solution is less likely to be the cause, it has been reported to work in some cases.

The adapter will not read my ABS, SRS, StabiliTrack, scheduled maintenance or any other lights.

This scanner is for OBDII vehicles only. This means that it can only be used to read OBDII codes (emissions system) in 99.9% of vehicles. In order to read these other codes you will need a more specialized tool, usually specific to your vehicle.